


# RS232 to RS422 Extender Kit Part Number 1830-190



## Wiring Instructions

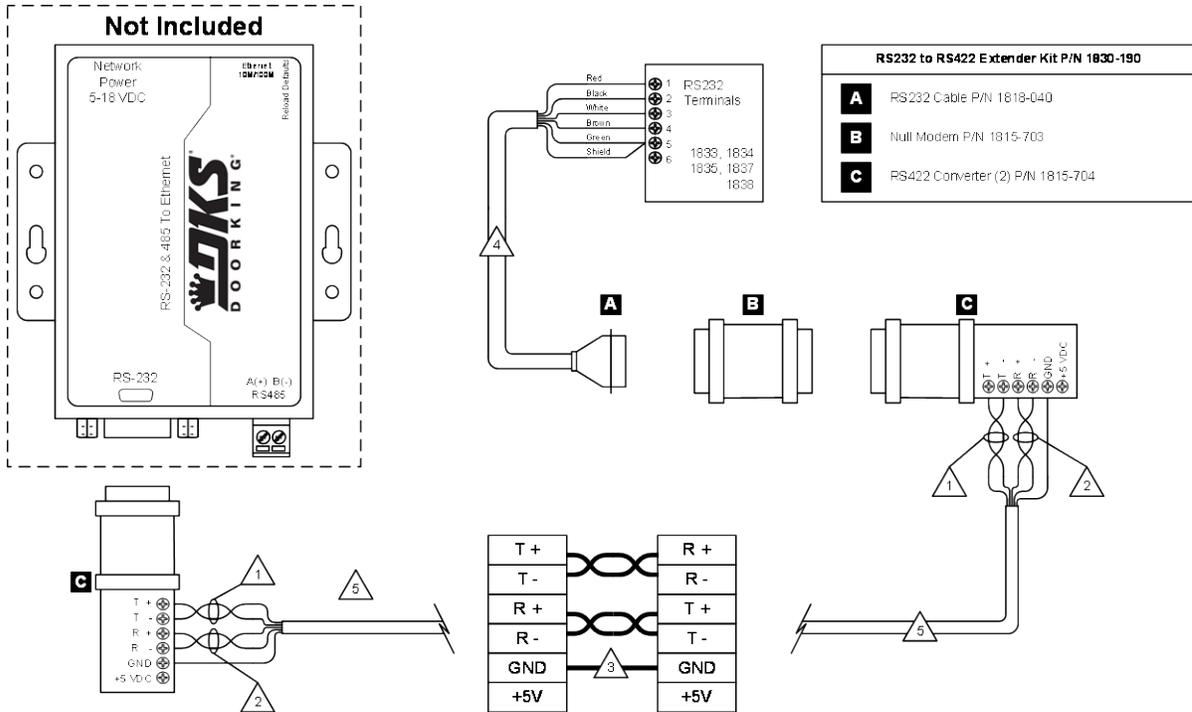

## Notes:

1. Transmit data terminals + & - connect to Receive data terminals + & - respectively. Wires connecting these terminals **MUST** be twisted.
2. Receive data terminals + & - connect to Transmit data terminals + & - respectively. Wires connecting these terminals **MUST** be twisted.
3. Ground wire is not twisted with any other wire(s).
4. The cable length on the supplied RS232 cable is six (6) feet. Maximum distance for any RS232 cable used with these extenders is 100 feet.
5. CAT5 wire is not supplied with this kit. Maximum distance for the CAT5 wire run is 4000 feet.
6. Note: The Ethernet Adapter is not a part of this kit – it is sold separately but shown here for clarification.