

QUICKSTART "BASIC" GUIDELINES FOR MODEL 9100 - FRONT INSTALLATION MOUNTED ON A CONCRETE PAD

Model 9100 is intended for installation only on sliding gates used for vehicles.

Pedestrians must be supplied with a separate access opening. For safety and installation instructions, please refer to the Installation/Owner's manual.

UL 325 August
2018 Standard



120 S. Glasgow Avenue
Inglewood, California 90301
U.S.A.

Physical Stops MUST be Used to Stop Gate

DO NOT power up and cycle the operator without "Physical Stops" installed to stop the gate in the open and close positions (Chain stops are included with the operator but other physical stops can be used). **Damage could occur to the gate and operator.** Chain stop's rubber bumpers face toward operator. They will make **contact with the operator housing** during the initial automatic open/close limits setting sequence.

Chain Adjustment

Adjust the chain nuts to tighten the chain. The chain should sag no more than one (1) inch per 10 feet of chain travel. **Do not over tighten the chain.**


- Chain **MUST** be parallel to gate!
- Chain bracket **MUST** line up with idler wheels!

Concrete Pad and Conduit Area

Circuit Board Settings

SW 1, Switch 1 - Must OPEN the gate upon initial AC power up and open command. If the open command begins to close the gate, turn AC power off and reverse this switch. (See reverse side)

"Basic" Setting of DIP-Switches

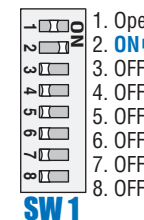


1. Opening Direction (See Illustration)
2. ON → Auto-Close Timer
3. OFF
4. OFF
5. OFF
6. OFF
7. OFF
8. OFF



1. ON
2. OFF
3. OFF
4. OFF
5. OFF
6. OFF
7. OFF
8. OFF

Note: SW 2, switch 1 is turned on when plug-in exit loop detector is installed.

Key Switch



Cycles the operator when pressed.

Automatic Limits


The 9100's open/close limits **DO NOT** have to be physically adjusted. **Every time the 9100 is powered up, the first open command will automatically run "2 open/close gate cycles" that will locate and remember the gate's open and close limit positions.** These limit positions are determined by where the physical stops have been installed. It does not matter what position the gate is in before running this sequence. The gate will function normally after this automatic sequence has finished.

Note: Auto-close timer should be on before running this sequence.

High Voltage Connection

GATE OPERATOR MUST BE PROPERLY GROUNDED!!

Tip: It is recommended that a surge suppressor be installed on the high voltage power lines.

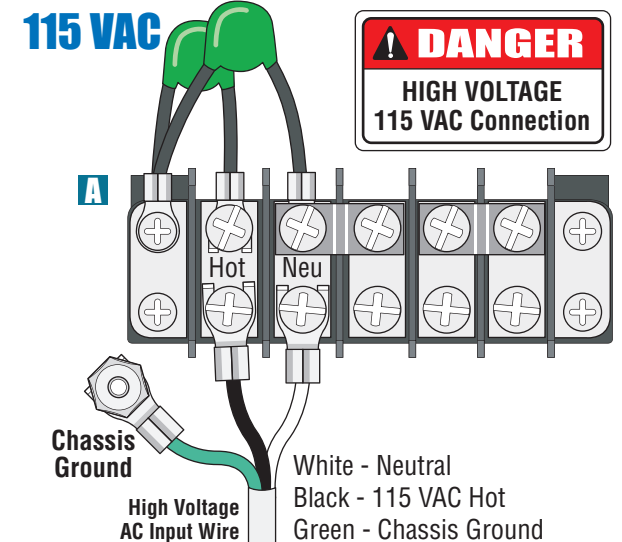

Every time the 9100 is powered up, the First open command will automatically run "2 open/close gate cycles" that will locate and remember the gate's open and close limit positions. See "Automatic Open/Close Limit Adjustment" in Installation/Owner's manual for more information.

Plug-In Loop Detectors


B Not included - Refer to the Installation/Owner's manual **AND** Loop Information Manual (available from www.doorking.com) for more information on loops and plug-in loop detectors.

Important Note: DoorKing highly recommends that loops and loop detectors are installed with this slide gate operator. A loop detection system will preventing the gate from automatically opening or closing on a vehicle when it is in the gate's path.

Radio Receiver

E Not included - Refer to a specific Radio Receiver Manual (available from www.doorking.com) for more information on radio receivers and antenna installation. (See reverse side for wiring)

Entrapment Protection must be provided for the gate system where the risk of entrapment or obstruction exists. The operator will NOT run without one or more monitored type B1 or B2 external entrapment protection devices in EACH direction of gate travel (minimum of 2 external devices required). See manual for more information.

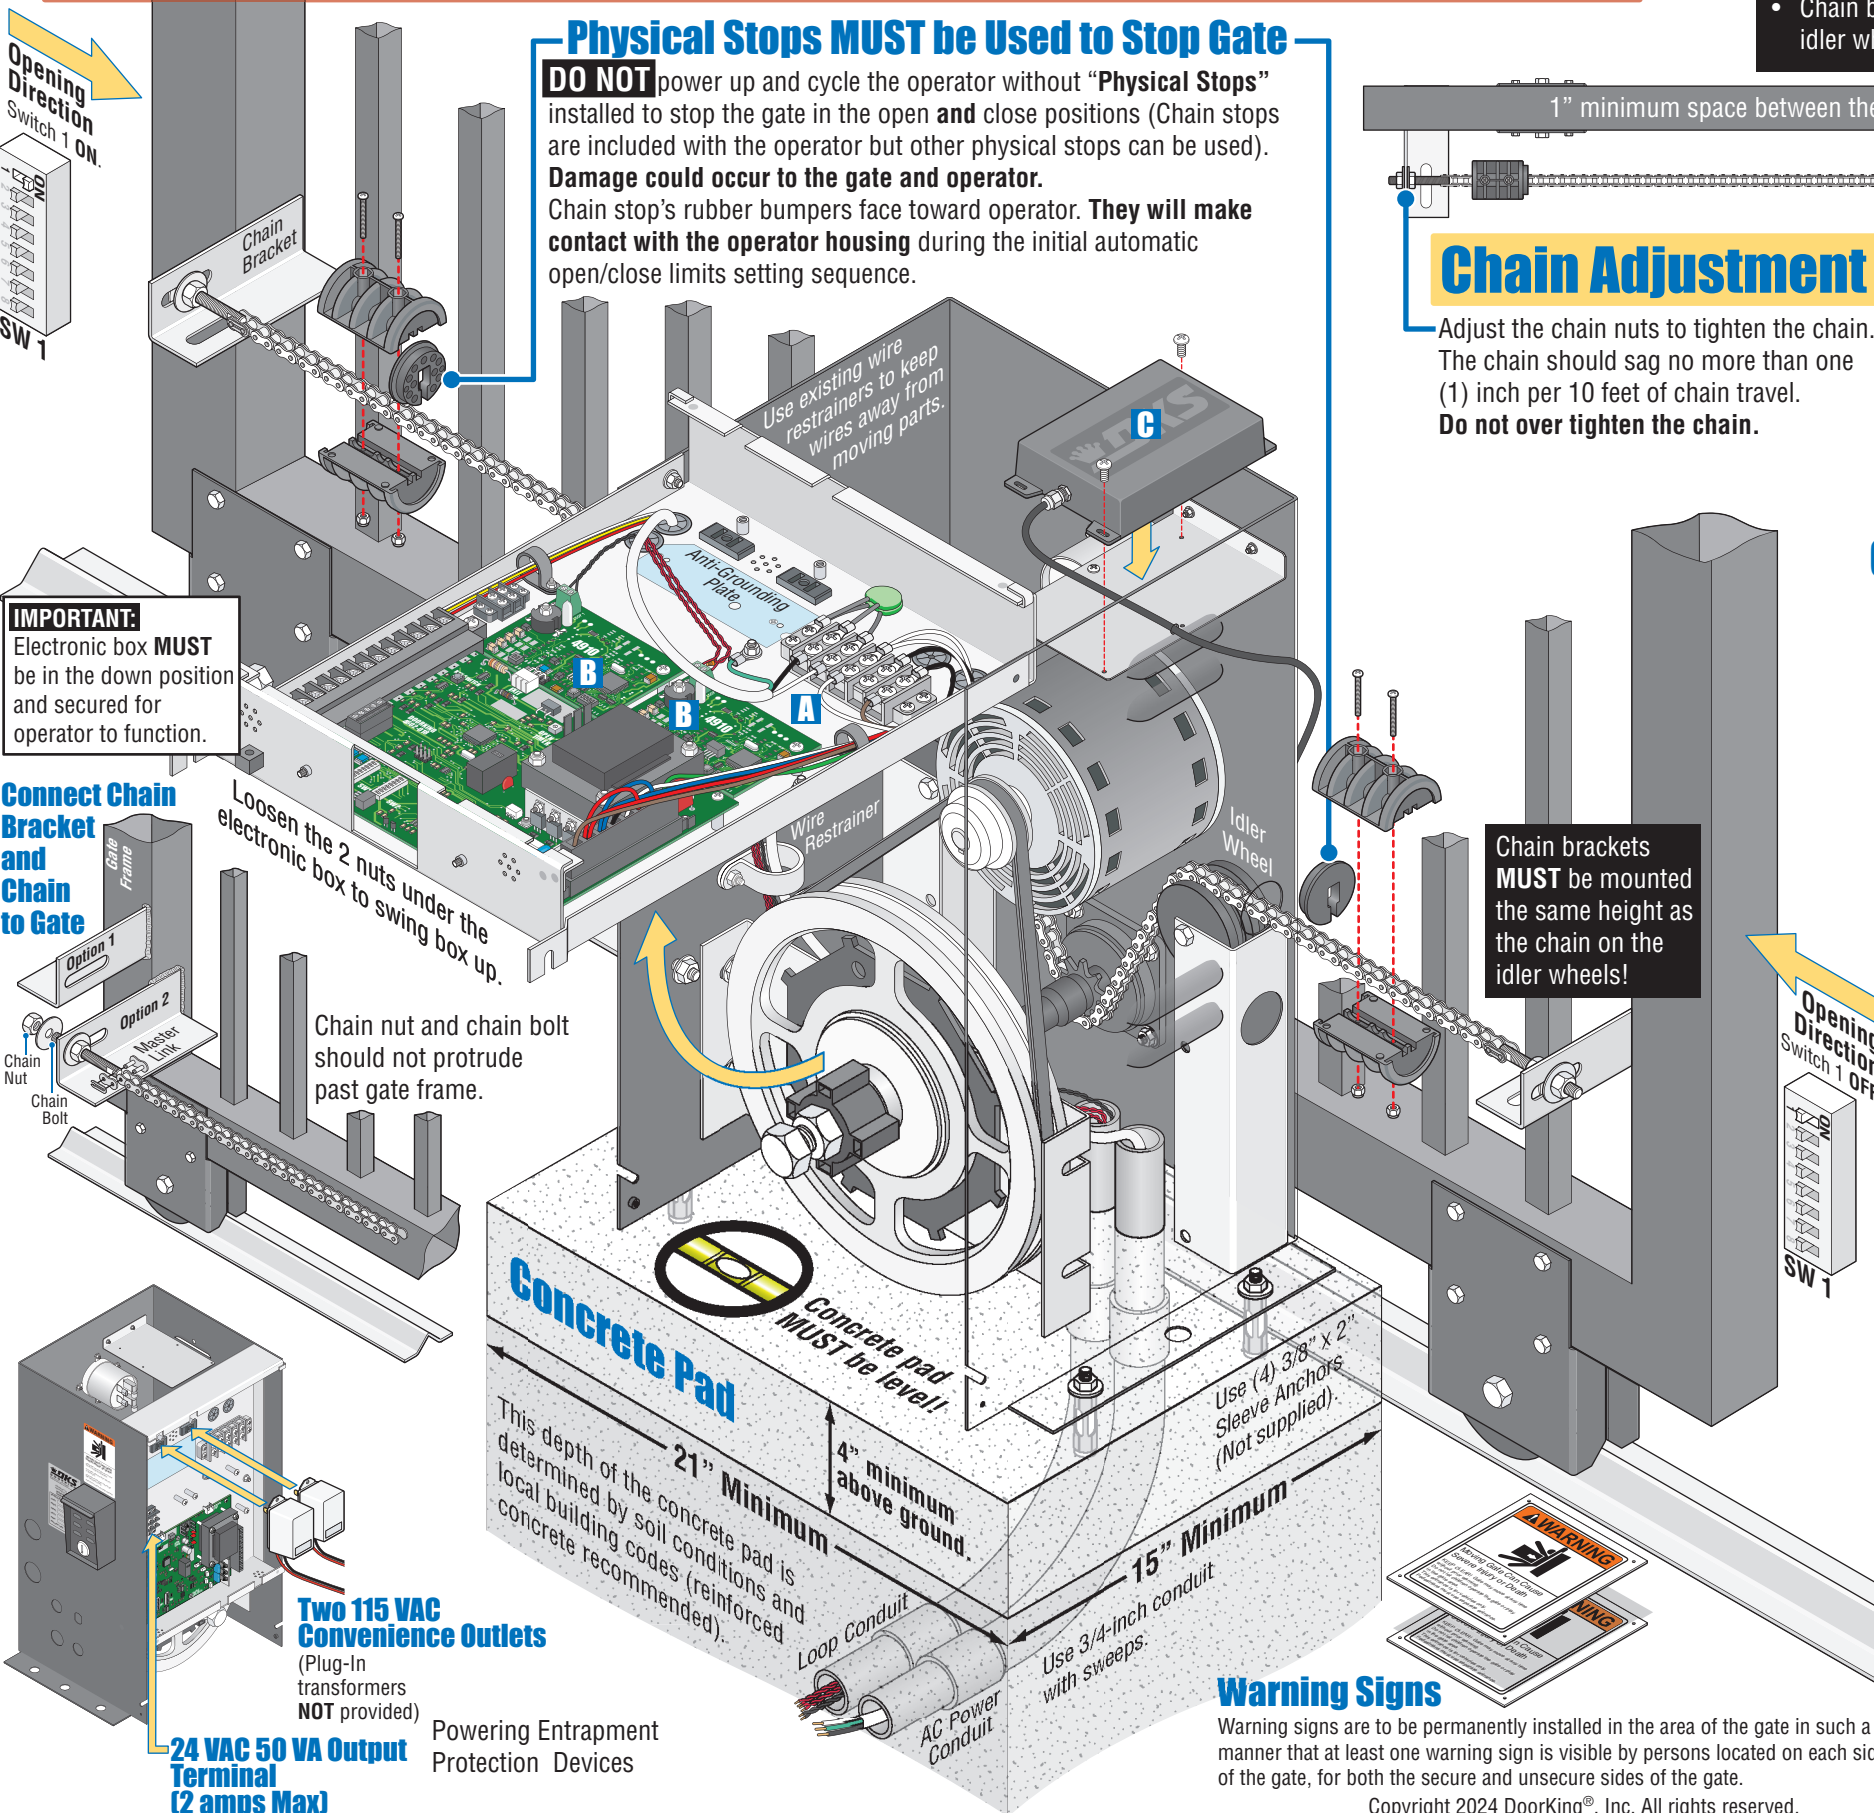

Warning Signs

Warning signs are to be permanently installed in the area of the gate in such a manner that at least one warning sign is visible by persons located on each side of the gate, for both the secure and unsecure sides of the gate.

Copyright 2024 DoorKing®, Inc. All rights reserved.

QUICKSTART “BASIC” GUIDELINES FOR MODEL 9100 - DIP-SWITCH AND WIRING REFERENCE

Model 9100 is intended for installation only on sliding gates used for vehicles.

Pedestrians must be supplied with a separate access opening. For safety and installation instructions, please refer to the Installation/Owner’s manual.


Important: Controls intended for user activation must be located at least six (6) feet away from any moving part of the gate and where the user is prevented from reaching over, under, around or through the gate to operate the controls. Emergency access controls only accessible by authorized personnel (e.g., fire, police, EMS) may be placed at any location in the line-of-sight of the gate.

UL 325 August 2018 Standard



120 S. Glasgow Avenue
Inglewood, California 90301
U.S.A.

SW 1

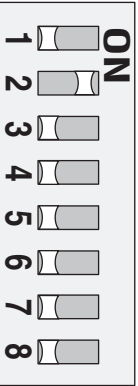


SW 1

Switch	Function	Setting	Description
1	Changes the direction the operator will open/close the gate depending on the different chain configurations.		
2	Auto-Close Timer	OFF	Auto-close timer is OFF. Manual input required to close gate.
		ON	Auto-close timer is ON. Adjustable from 1-23 seconds to close gate.
		OFF	Normal Setting. No voltage to motor when gate is stopped (Level gate).
		ON	Voltage applied to motor always. Keeps inclined gate from coasting when stopped.
4 and 5	Relay Activation and LED Indicator Light Activation	4-OFF 5-OFF	Relay activates and LED is ON when the gate is fully open.
		4-OFF 5-ON	Relay activates and LED is ON when the gate is not closed.
		4-ON 5-OFF	Relay activates and LED is ON when the gate is opening and open.
		4-ON 5-ON	Relay activates and LED is ON when the gate is opening and closing.
6	Self-Test	OFF	Normal Setting.
		ON	Runs self-test. Caution: Bench testing ONLY!
7 and 8	Gate Open Back-Off Position	7-OFF 8-OFF	Normal Setting. Gate fully opens.
		7-OFF 8-ON	Gate stops short 1" from full open position. Used for a reversing edge device.
		7-ON 8-OFF	Gate stops short 2" from full open position. Used for a reversing edge device.
		7-ON 8-ON	Gate stops short 3" from full open position. Used for a reversing edge device.

Note: After a DIP-switch setting is changed, power must be turned OFF and then turned back on for the new setting to take affect.

SW 2

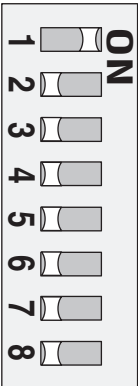

SW 2


Switch	Function	Setting	Description
1	Exit Loop Port Output	Jumper Wire Needed See Manual	A plug-in exit loop detector plugged into the EXIT Loop port will partially open single operator or fully open dual operators depending on type of loop detector used).
	Full Open Input	ON	Normal Setting. Plug-in exit loop detector will fully open gate (Single operator).
2	Reverses Gate	OFF	Normal Setting. Input to terminal #6 and/or reverse loops will reverse gate during close cycle.
	Stops Gate	ON	Input to terminal #6 and/or reverse loops will stop gate during close cycle – gate will continue to close after input to terminal #6 and/or reverse loops are cleared (Helps prevent tailgating vehicles from unauthorized entry).
3	Partial Open (14 Ft)	OFF	Normal Setting. Switch must be OFF for terminal #5 input to open gate 14 Ft.
		ON	DO NOT use ON setting. NOT associated with partial open feature for the 9100.
4	Built-in Solenoid Lock	OFF	Normal Setting. Fail-safe logic. Lock engages only if attempt is made to force gate open (Factory setup).
		ON	Fail-secure logic. Lock engages after each gate cycle (2600-862 Lock kit required).
5	Operator Model Select	OFF	Normal Setting. Switch must be OFF for Model 9100.
		ON	DO NOT use ON setting for Model 9100.
6	Quick-Close Timer Override	OFF	Normal Setting. Timer will function normally.
		ON	Opening gate will stop and begin to close as soon as all reversing inputs (Reverse loops, photo sensors) are cleared regardless of the distance the gate has opened.
7 and 8	Gate Close Back-Off Position	7-OFF 8-OFF	Normal Setting. Gate fully closes.
		7-OFF 8-ON	Gate stops short 1" from full close position. Used for a reversing edge device.
		7-ON 8-OFF	Gate stops short 2" from full close position. Used for a reversing edge device.
		7-ON 8-ON	Gate stops short 3" from full close position. Used for a reversing edge device.

#5 Terminal Note (Single Operator Only): Any opening device connected to terminal #5 will open the gate to the partial open 14-ft setting. External entrapment protection devices will also open the gate to the partial open setting. If the Inherent Reverse Sensor gets activated during the close cycle, it will always fully open the gate.


Entrapment Protection must be provided for the gate system where the risk of entrapment or obstruction exists. The operator will NOT run without one or more monitored type B1 or B2 external entrapment protection devices in EACH direction of gate travel (minimum of 2 external devices required). See manual for more information.



24 VAC Power Output Powers 24VAC control devices/entrapment protection devices. (2 amps Max)

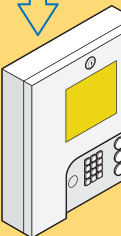


Telephone Entry

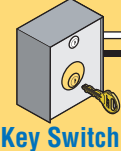

Key Switch




Stand-Alone Keypad

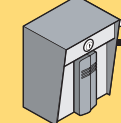


Stand-Alone Card Reader

3-Wire Radio Receiver

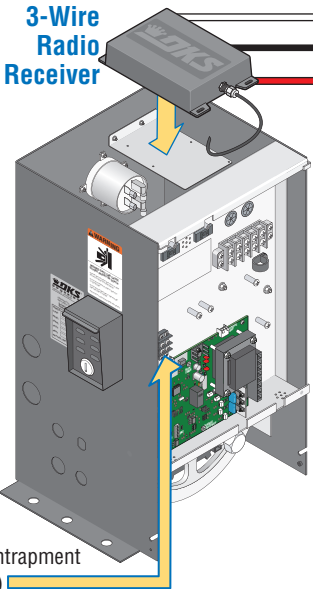

Relay - #2 - Full Open.
#5 - Opens gate 14-feet.




4-Wire Receiver

Terminal #3 Note: Exceeding 250 mA of power from this terminal may cause the circuit board transformer to overheat, causing intermittent problems.

External Entrapment Protection Devices

Only 1 monitored Device can be connected to each input. An OPTIONAL Expansion Kit (sold separately) will allow connection for additional devices.

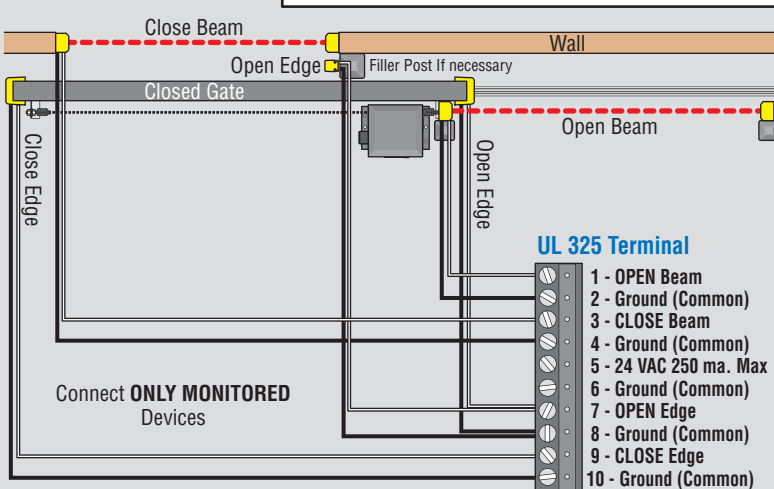

UL 325 Terminal

- 1 - OPEN Beam
- 2 - Ground (Common)
- 3 - CLOSE Beam
- 4 - Ground (Common)
- 5 - 24 VAC 250 ma. Max
- 6 - Ground (Common)
- 7 - OPEN Edge
- 8 - Ground (Common)
- 9 - CLOSE Edge
- 10 - Ground (Common)


UL 325 DIP-Switches

DIP-switches MUST be turned ON for each device wired to terminal.

- 1 - OPEN Beam (UL 325 Terminal 1)
- 2 - CLOSE Beam (UL 325 Terminal 3)
- 3 - OPEN Edge (UL 325 Terminal 7)
- 4 - CLOSE Edge (UL 325 Terminal 9)

IMPORTANT: Monitored Photo and Edge sensors must be end-of-line resistive types. See specific manufacturer's wiring manual for more information.

Fire Dept Open

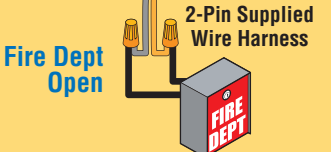

Gate will ONLY OPEN when this device is activated by authorized personnel ONLY (fire, police, EMS) and operator has power. Alarm will sound during entire open cycle. Operator will then go into a hard shutdown once fully opened. Operator MUST be reset to function normally again. This device MUST be mounted in the line-of-site of gate so authorized personnel can monitor gate movement.

Dual Gate Operators Note: Connect device to BOTH operators, both gates will fully open.

Activation Note: Activation of this device will OPEN gate regardless of the status of the open direction monitored external entrapment protection device(s). If gate is opening, and the operator's inherent entrapment protection system detects an obstruction, the operator will reverse approx. 2 inches and go into a hard shutdown. Operator reset button MUST be pushed to function again OR cycle operator's power.